

D Montageanleitung

GB Assembly instructions

NL Handleiding voor de montage

PL Instrukcja montażu

HU Szerelési útmutató

RO Instrucțiuni de montaj

FR Notice de montage

IT Istruzioni di montaggio

CZ Montážní návod

 
 
SK Návod na montáž

TR Montaj talimatı

RU Инструкция по монтажу













Service • Assistenza • Dienstverlening • Serwis
Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Názv Nazwa • Imię • Názov • Név Действительное имя • Название	Lake
Nr. • No. • N° • Номер • Č • Sz Typ • Type • Tip • Típus • Tipo Тип	5.4119

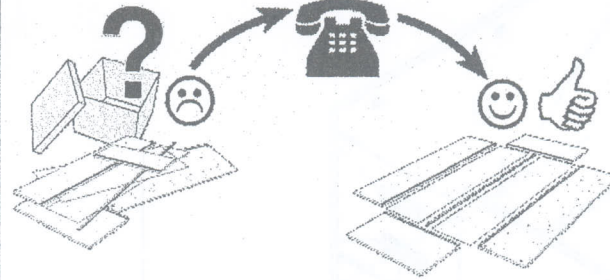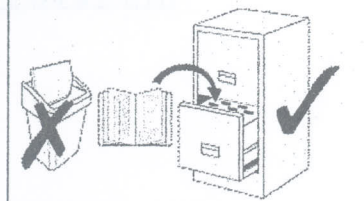


1.	ASL 445x350x15mm	1
2.	ASR 445x350x15mm	1
3.	BL 801x370x15mm	1
4.	ZB 769x333x15mm	1
5.	BLD 800x61x15mm	1
6.	BLL 384x61x15mm	1
7.	BLR 384x61x15mm	1
8.	RW 769x221x15mm	1

e11	24,3	12x
f1		12x
r9		3x
l		4x
l1		4x
n	8x30mm	8x
t1	3,5x15	6x
y4	Leim	1x

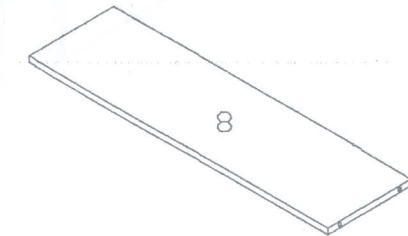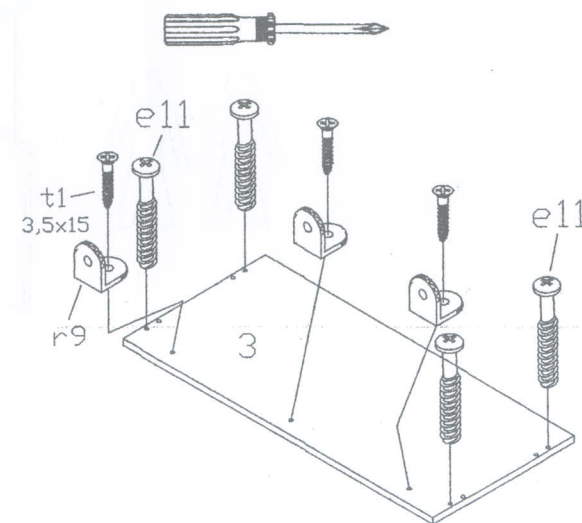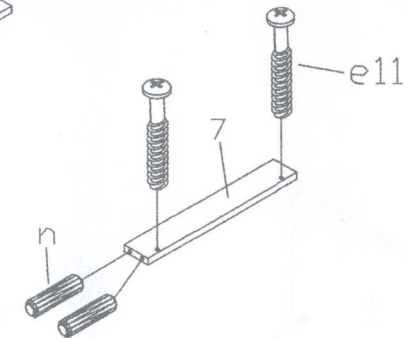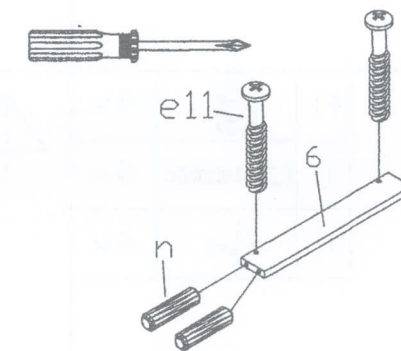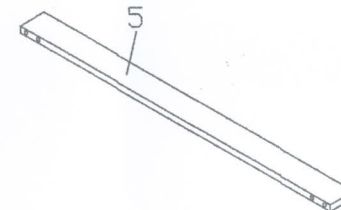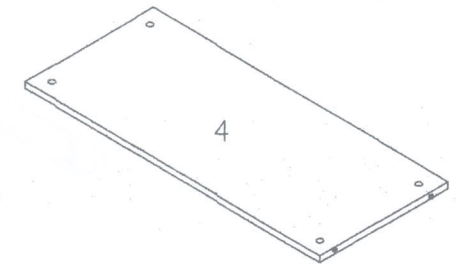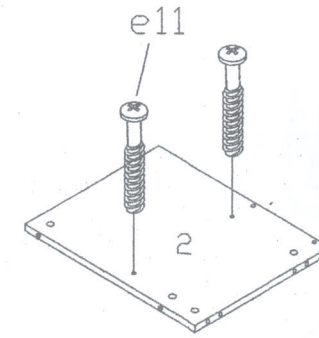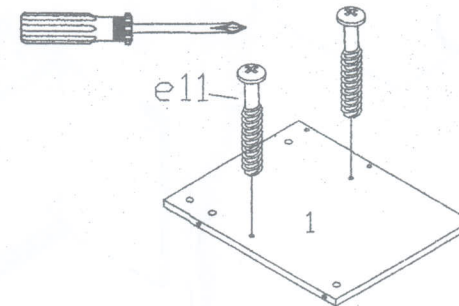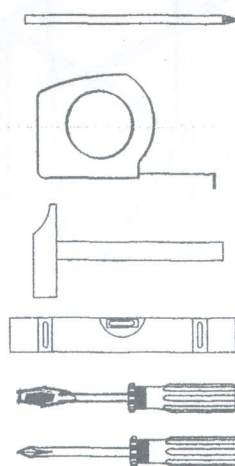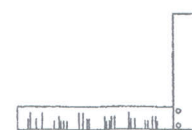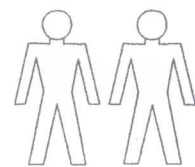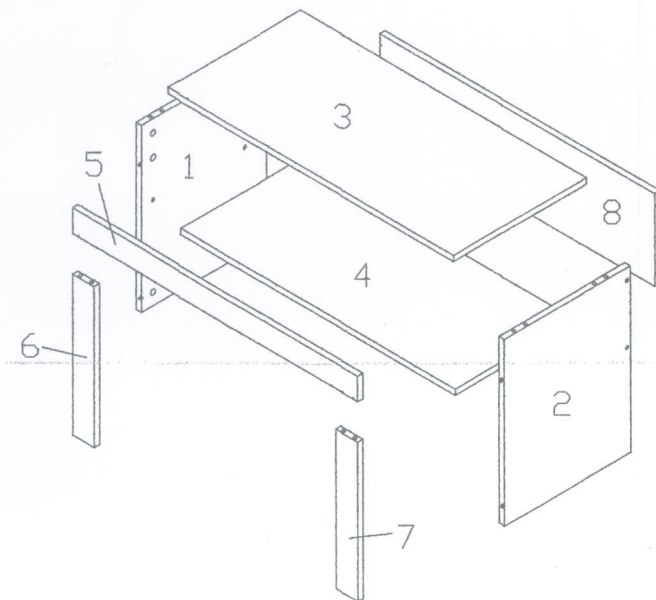            

e11	24,3	12x
r9		3x
n	8x30mm	4x
t1	3,5x15	3x

 1

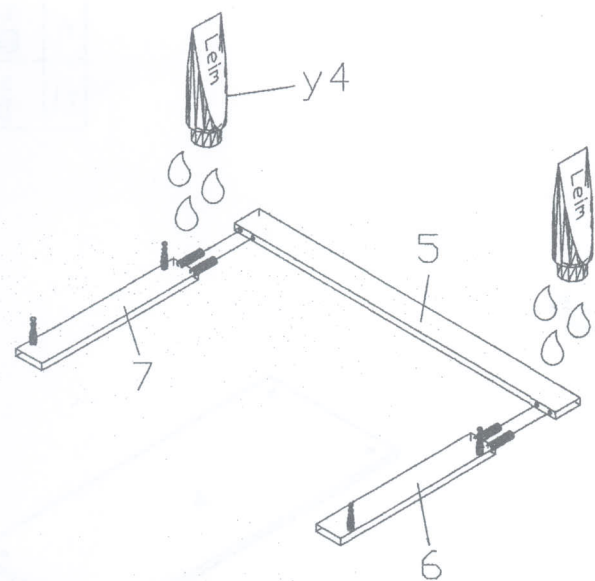


y4




1x

 
3

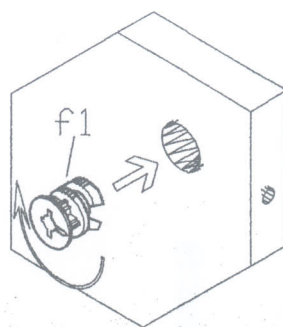


f1		4x
n	8x30mm	4x

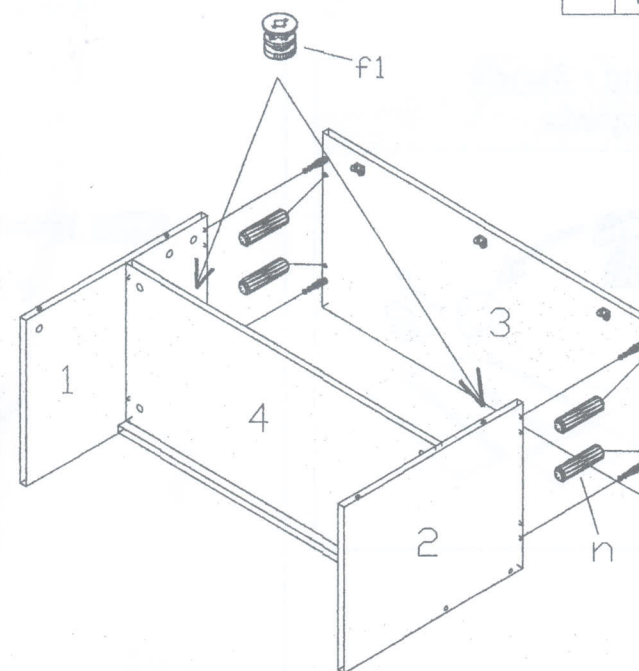 

5


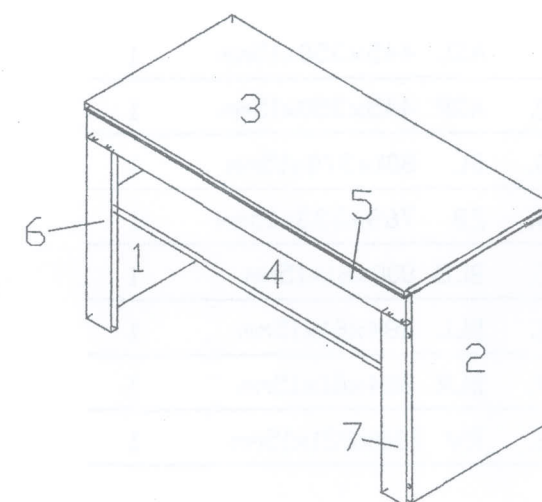 


2

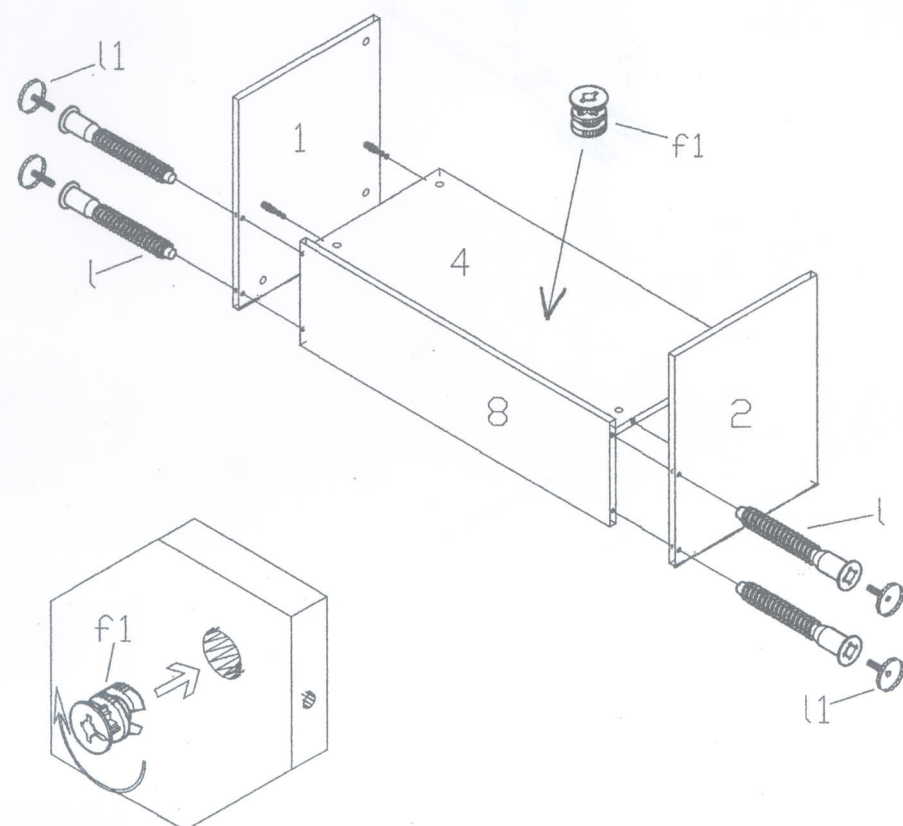 

f1		4x
l		4x
l1		4x

  4

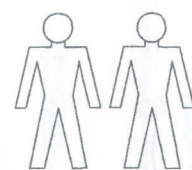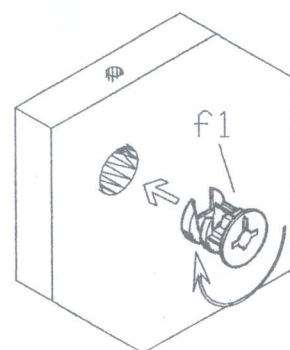

f1		4x
t1	3,5x15	3x

